
Audeum Copycat Quick Guide

1. Plug in power cable, press POWER (you will see the boot / startup process launch on the LCD screen, all drives will be tested, allow boot process to complete)
2. Using arrows for SOURCE drive menu, select desired function (example: COPY) and press SELECT
3. Load source disc in SOURCE drive, located in top slot of the Copycat
4. Load blank media in TARGET drives
5. Copycat will analyze source disc and blank media discs, if defects are found the discs will be ejected and need to be replaced
6. If all BURN drives are loaded with blank media, job will begin automatically (if not, you simply perform step 2 and manually launch)
7. When job is completed, discs are ejected to be removed and replaced for next job (defective discs will not be ejected and deemed failed and are not useable)

For more in depth information on the Audeum Copycat system, please read the SOURCE DRIVE manual which has all the info you could ever need. The pdf is available for download from the Copycat product page at www.audeum.com.

Thanks and enjoy!

The Audeum Team

www.audeum.com